




2007 Chevy / GMC 1500 2WD & 4WD

1.25", 1.5" and 2.5" Lift Systems

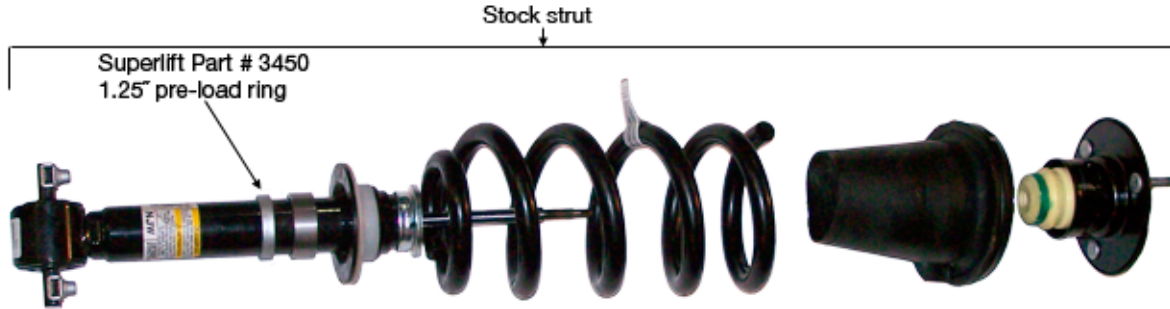

#3450 2007 GM 1500 1.25" Front Lift - This least expensive method utilizes a machined ring, called a preload ring, inserted below the factory shock's coil spring. In addition to lifting the vehicle, the preload rings slightly increase spring rate which helps offset the additional loads created by running wider tires / wheels, and firms up what would otherwise be "spongy" ride and handling characteristics. If your vehicle is equipped with the factory Autoride electronic shock option, the preload ring lift method allows you to retain the factory shocks.

#30100 2007 GM 1500 1.5" Strut Spacers - Strut Spacers are the fastest, safest, least expensive way to bring the front of your New Body Chevrolet Silverado level with the rear. This gives you the clearance and ability to add taller tires and wheels. Superlift offers a 1.5" spacer made from machined Billet Aluminum that allows you to maintain your factory OE ride. Unlike urethane strut spacers, these aluminum spacers never wear out.



#3451 2007 GM 1500 2.5" Strut Lift - This method involves installing the factory coil springs onto new Superlift coilover shock bodies. Our lifetime warranted premium gas shocks feature 50mm diameter bodies with 14mm rods. The high pressure gas monotube design is valved slightly firmer than the factory shocks to reduce the spongy factory ride.

SUSPENSION SYSTEMS - CHEVY / GMC

TAHOE, YUKON, SUBURBAN, AVALANCHE 1/2 TON 4WD & 2WD

2007 - EXCEPT DENALI AND ESCALADE

1 1/4" - 2 1/2" FRONT / 0" REAR

LIFT HEIGHT & METHOD	MASTER PACK (QTY) & PART NUMBER - BASE KIT COMPONENTS		NOTES:	
1 1/4" LIFT - with or w/o ELECTRONIC CONTROLLED SHOCK ABSORBERS				
SPRING PRE-LOAD SPACER	3450 (NO SHOCKS)	(1) 3450 FRONT KIT BOX		
SEE OPTIONS BELOW				
1 1/2" LIFT - w/o ELECTRONIC CONTROLLED SHOCK ABSORBERS				
FRT. STRUT SPACER	30100 (NO SHOCKS)	(1) 3451 FRONT KIT BOX		
SEE OPTIONS BELOW				
2 1/2" LIFT - w/o ELECTRONIC CONTROLLED SHOCK ABSORBERS				
FRT. COILOVER SHOCK BODY	3451 SS - SERIES	(1) 3451 FRONT COILOVER SHOCK KIT		
SEE OPTIONS BELOW				
OPTIONS			OPTIONS	
REAR SHOCKS		REAR COIL SPACER		
85500 REAR SHOCK ABSORBERS		3453 PAIR, PROVIDES 3/4" LIFT		

SUSPENSION SYSTEMS - CHEVY / GMC

PICKUP - SILVERADO / SIERRA K1500 ALL 4WD & 2WD

2007 - EXCEPT DENALI AND ESCALADE

1 1/4" - 2 1/2" FRONT / 0" REAR

LIFT HEIGHT & METHOD	MASTER PACK (QTY) & PART NUMBER - BASE KIT COMPONENTS		NOTES:	
1 1/4" LIFT - with or w/o ELECTRONIC CONTROLLED SHOCK ABSORBERS				
SPRING PRE-LOAD SPACER	3450 (NO SHOCKS)	(1) 3450 FRONT KIT BOX		
SEE OPTIONS BELOW				
1 1/2" LIFT - w/o ELECTRONIC CONTROLLED SHOCK ABSORBERS				
FRT. STRUT SPACER	30100 (NO SHOCKS)	(1) 3451 FRONT KIT BOX		
SEE OPTIONS BELOW				
2 1/2" LIFT - w/o ELECTRONIC CONTROLLED SHOCK ABSORBERS				
FRT. COILOVER SHOCK BODY	3451 SS - SERIES	(1) 3451 FRONT COILOVER SHOCK KIT		
SEE OPTIONS BELOW				
OPTIONS			OPTIONS	
REAR SHOCKS		REAR BLOCK KIT		
85140 REAR SHOCK ABSORBERS		3916 1 1/2" REAR BLOCK KIT		
BE5-6248-H5 SELECT SERIES by BILSTEIN (SS)		3925 2" REAR BLOCK KIT		

Part #	Jobber	UPC	Box Deminsions
3450	51.48	804260048228	11 x 2-3/4 x 5-3/8
3451	243.43	804260048235	22-1/2 x 11-1/4 x 5-3/8
30100	219.95	804260068349	15 x 4-3/8 x 5
85140	37.13	804260013240	
85500	37.13	804260049959	
3453	51.48	804260048242	11 x 2-3/4 x 5-3/8
3916	74.76	804260048389	15 x 4-3/8 x 5
3925	75.51	804260068356	15 x 4-3/8 x 5