



8" Lift for 2008 4WD Ford Super Duty...

- System with rear lift via blocks / add-a-leaves shipping now. Replacement rear spring version shipping in April, 2008.


Features either gas or diesel specific replacement coil springs. Radius arm lowering brackets, pitman arm, track bar relocation bracket, proper compression travel control, sway bar links, you name it... if it's needed, it's included. Two different performance shocks are offered, plus tons of optional accessories including our front 4-link conversion.

Note that factory steering stabilizer cannot be retained. Choose from two different dual stabilizer options.



Dual steering stabilizer kit with SS series silver Zinc plated cylinders now available for all lifted Super Dutys... part #92730!

New Superlift pitman arm design translates into less effort required at the steering wheel and easier turning!

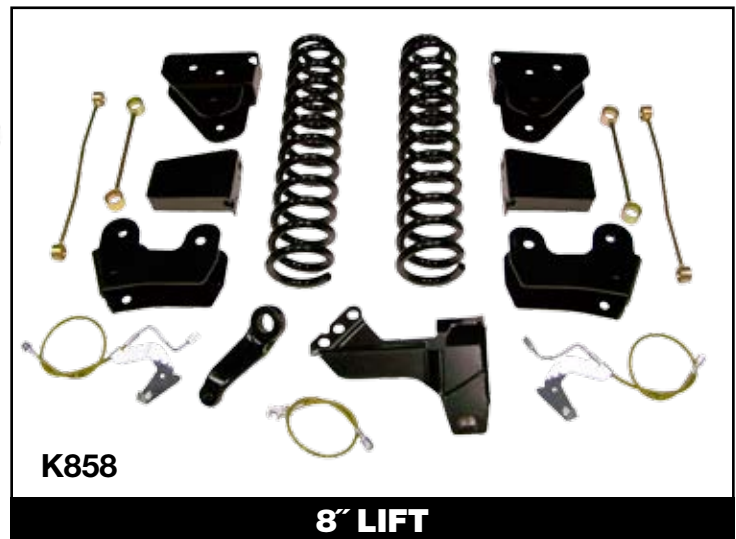

Are these products in the current Superlift catalog #115?

Not all; see below.

Make these catalog additions / revisions, or print-out the new chart attachment then insert into the catalog:

Page 182 - In STEERING STABILIZERS chart box, add #92730, dual steering stabilizer kit with SS series silver Zinc plated cylinders.

Page 180 and 181- In STEERING STABILIZERS chart box, add #92730, dual steering stabilizer kit with SS series silver Zinc plated cylinders.

Installation Notes - Make these revisions on page 182 and 183:

- **Add new note #156:** Most Super Duty vehicles have a 1.91" tall factory block (measured at block's rear facing end) and do NOT have top-mounted overload springs; this is Superlift's standard configuration and is included in the Master Pack. If equipped with 1.91" factory block AND top-mount overloads OR 3.71" factory block WITHOUT top-mount overloads: order either block kit # 9158, or set of longer U-bolts (qty. one #11684). If equipped with 3.71" factory block AND top-mount overloads: order either block kit # 9157, or set of longer U-bolts (qty. one #11694).
- **Omit note #125.**
- **Omit Installation Note 118.** Superlift Rear Load Assist System (#9038) is NOT included with replacement rear spring system.
- **Add new note #153:** Factory rear overload springs cannot be retained if replacement rear springs are used. For full load carrying capacity order Superlift Rear Load Assist System #9038. Note that #9038 is not listed in price sheet #128J... Jobber price is \$270.92.

SUSPENSION SYSTEMS - FORD

F-250 / 350 SUPER DUTY 4WD 2008

8" FRONT / 7" REAR

LIFT HEIGHT & METHOD	MASTER PACK	(QTY) & PART NUMBER - BASE KIT COMPONENTS	NOTES
V-8 GAS ENGINE			
FRONT COMPLETE SYSTEM INCLUDES: COIL SPRINGS CASTER, RADIUS ARM AND RELATED BRACKETS REAR 5" BLOCKS & ADD-A-LEAFS SEE OPTIONS BELOW	K857 SUPERIDE OR K857R SSR - REMOTE	(1) 9068 FRT. KIT BOX W/ SUPERIDE SHOCKS OR (1) 9068R FRT. KIT BOX W/ SSR-REMOTE SHKS PLUS (1) 299 FRONT COIL SPRINGS (1) 2570 ADD-A-LEAF KIT (1) 9032 REAR BLOCK KIT <i>FACTORY STEERING STABILIZER WILL NOT WORK. CHOOSE FROM DUAL STABILIZER OPTIONS BELOW</i>	(2) 01-188 Rear Leaf Springs 119 153 156 157 158
V-10 / DIESEL ENGINE			
FRONT COMPLETE SYSTEM INCLUDES: COIL SPRINGS CASTER, RADIUS ARM AND RELATED BRACKETS REAR 5" BLOCKS & ADD-A-LEAFS SEE OPTIONS BELOW	K858 SUPERIDE OR K858R SSR - REMOTE	(1) 9068 FRT. KIT BOX W/ SUPERIDE SHOCKS OR (1) 9068R FRT. KIT BOX W/ SSR-REMOTE SHKS PLUS (1) 298 FRONT COIL SPRINGS (1) 2570 ADD-A-LEAF KIT (1) 9032 REAR BLOCK KIT <i>FACTORY STEERING STABILIZER WILL NOT WORK. CHOOSE FROM DUAL STABILIZER OPTIONS BELOW</i>	
OPTIONS			
STEERING STABILIZERS		4-LINK CONVERSION KITS	CARRIER BEARING RELOCATOR
92694 DUAL STEERING STAB. KIT - STANDARD 92730 DUAL STEERING STAB. - SS (STAINLESS)		9034 4-LINK KIT WITH SUPERLIFT SYSTEM 9036 4-LINK UNIVERSAL KIT - ALL BRANDS	9695 CARRIER BEARING DROP KIT (FOR VEHICLES WITH 2-PIECE REAR DRIVE SHAFT)
TORQUE MAX STANDARD SERIES		TORQUE MAX SELECT SERIES	MULTI-SHOCKS - FRONT
TRACTION DEVICE 20500 EXTENDED CAB - SHORT BED 20510 CREW CAB - SHORT BED 20520 REG., EXT., & CREW CABS - LONG BED		TRACTION DEVICE 20505 EXTENDED CAB - SHORT BED 20515 CREW CAB - SHORT BED 20525 REG., EXT., & CREW CABS - LONG BED	60132 FRONT DUAL SHOCK KIT BRACKETS (QTY) & SHOCK REQUIRED FOR MULTI-SHOCK (2) 88540 SUPERIDE SHOCKS (2) 95023 SELECT SERIES REMOTE RES. (SSR) <i>(NOTE: THE STOCK LOCATION SHOCK IS REUSED, ORDER (4) SHOCKS IF CONVERTING TO NEW SHOCK SERIES.)</i>
STAINLESS STEEL ACCESSORIES		eXTREME RING	REAR LOAD ASSIST
30605 RADIUS ARMOR, RADIUS ARM COVERS 9659 FRONT SKID PLATE W/LOGO		50115 DIFF. PROTECTOR - DANA 50/60 FRONT	9038 REAR LOAD ASSIST KIT BOX

NOTES:

119..Dually applications require different U-bolts. Measure stock U-bolts and refer to U-bolt specification chart to order correct U-bolts.
153...Factory rear overload springs cannot be retained if Superlift replacement rear springs are used. For full load carrying capacity order Superlift Rear Load Assist System # 9038.

156..Most Super Duty vehicles have a 1.91" tall factory block (measured at block's rear facing end) and do NOT have top-mounted overload springs; this is Superlift's standard configuration and is included in the Master Pack. If equipped with 1.91" factory block AND top-mount overloads OR 3.71" factory block WITHOUT top-mount overloads: order either block kit #9158, or set of longer U-bolts (qty. one #11684). If equipped with 3.71" factory block AND top-mount overloads: order either block kit #9157, or set of longer U-bolts (qty. one #11694).

157..Front Bulletproof brake hoses included in kit box.

158..Rear Bulletproof brake hose included in kit box.

**Revised Page 181
Superlift Catalog #115**

2008 Ford Superduty 8" Suspension							
Part #	Jobber	UPC	Box Deminsions	Part #	Jobber	UPC	Box Deminsions
01-188	389.95	804260069827	No Box	9034	768.66	804260048877	33x13x7.5
11684	87.80	804260005566	19x2.75x5.375	9036	896.25	804260048884	33x13x7.5
11694	87.80	804260019228	19x2.75x5.375	9038	140.81	804260069803	22.5x7x5.375
20500	590.90	804260068998	73x14x9.375	9068	1,017.03	804260069186	33x16.5x10.5
20505	862.99	804260069001	73x14x9.375	9068R	1,684.21	804260069728	33x16.5x10.5
20510	590.90	804260069018	73x14x9.375	9157	112.03	804260042424	22.5x7x5.375
20515	761.62	804260069025	73x14x9.375	9158	112.03	804260070403	22.5x7x5.375
20520	617.16	804260069032	73x14x9.375	92694	216.00	804260068967	22.5x11.25x5.375
20525	774.75	804260069049	73x14x9.375	92730	446.36	804260035891	22.5x11.25x5.375
2570	91.33	804260007645	51x4.5x3.25	95023	216.41	804260035921	3x3x24
298	339.73	804260035532	25.625x16.5x7.875	9659	445.81	804260029869	15.5x7.75x46
299	328.91	804260035549	25.625x16.5x7.875	9695	72.02	804260029906	11x2.75x5.375
30605	224.47	804260035426	22.5x7x5.375	K857	1,496.80	804260069889	44x24x21.5
50115	160.20	804260009113	13.125x13.125x3.5	K857R	2,163.98	804260069896	44x24x21.5
60132	383.46	804260069056	22.5x11.25x5.375	K858	1,507.62	804260069902	44x24x21.5
88540	51.66	8042600477221	3x3x24	K858R	2,174.80	804260069919	44x24x21.5
9032	59.83	804260069193	22.5x7x5.375				